 


Service Package includes

- 1x RENTAL Router SoftBank 502HW
- 1x USB Cable
- 1x USB Charger

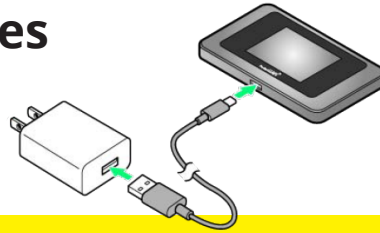

! ATTENTION


Pocket Router is RENTAL and must be returned to cancel the service!

HOW TO CONNECT



1

Press and **hold** the Power Button until "Pocket Wifi" shows on the screen

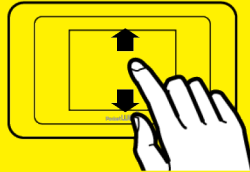

2

Slide up or down to **unlock** the screen



Wi-Fi

3

Press the **WI-FI ICON** to see the **Wi-fi Name (SSID A)** and **Password (Security Key)**



4

Find the Wi-fi name (502HW...) in your devices (cellphone, tablet or computer) and insert the Password. Done!

FEATURES



データ通信量
Check your data usage



SSID
See or change the Wi-fi name and Password



テレビ
TV Service settings



インターネットWi-Fi
Turn on or off your WiFi service



接続数
Number of devices connected



お知らせ
Inbox messages sent by the carrier




WPS
Connect other devices by WPS



端末情報
Information about the device



ヘルプ
Information about all icons and service status

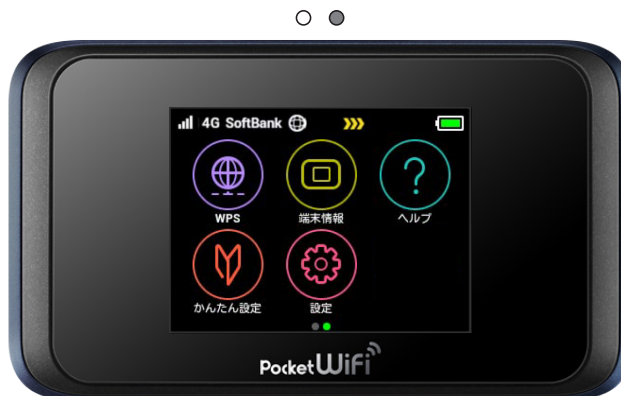

かんたん設定
Wifi Name & Password, screen password etc



設定
Device general Setup (DO NOT CHANGE any settings)

Contact our Sales Representatives on FACEBOOK or call us!